



Discovery Education *unitedstreaming*

Troubleshooting with LCD Projectors

- **Use the FN** key and one of the following: F3, F5, F7, or F8 on your computer (look for the monitor icon on the key). This allows your machine to show the video through the LCD Projector. Laptops may not have the "FN" key; follow the manufacturer's directions to set the display settings so that your laptop display goes black but the LCD Projector works.
- **Change the Hardware Acceleration:** START > Settings > Control Panel > Display > Settings > Advanced > Troubleshooting Change > the hardware acceleration to NONE if it is set on FULL.
- **Open the plug-in Windows Media Player...** On the menu bar, select > View > Tool > Options > Performance. Look down on the window for "Video Performance" > Hardware Acceleration. Change the hardware acceleration to NONE if it is set on FULL.
- **Also in Windows Media Player...**
Under "Network buffering", turn buffering on.
- **Reset video resolution**
Try resetting the video resolution to the highest resolution.
- **Update Hardware**
Try updating the computer's video driver if the computer/video card is somewhat old.